

 


Mailing Address:
PO Box 1674
Warsaw, IN 46581-1674

Phone: 844-SEYMOUR
FAX: 574-267-8508
www.seymourmidwest.com

Shipping Address:
2666 S Country Club Rd
Warsaw, IN 46580

Seal Coat II Squeegee Assembly Instructions

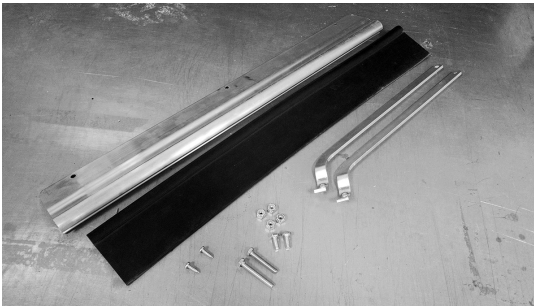

Tools Needed for Assembly

- 7/16" wrench (two)
- Phillips head screwdriver

Parts Shipped with Unit:


- Head
- Aluminum handle (not shown)
- Wrap-around brace (set of 2)
- Bolt bag for brace
- Seal Coat II rubber blade
- 2 Phillips head screws



Rubber Blade Installation Instructions:


1. Slide Seal Coat II rubber blade into rounded open slot in the aluminum head. Insert until rubber blade sits flush on both sides of the rounded slot.
2. Slowly insert 1 screw into each side of the rubber blade to expand the rubber at each end and keep the blade from sliding out of the rounded slot. It may take several turns before the screw "grabs" the rubber and begins screwing into the blade.

NOTE: It is important when installing or replacing the rubber blade that it be installed straight.

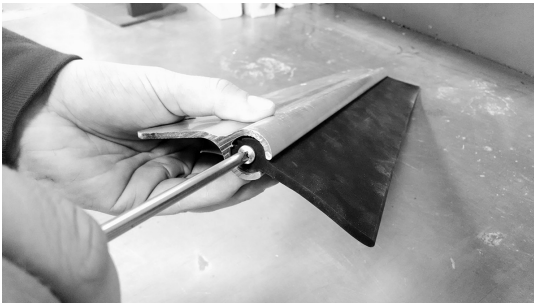

Handle & Brace Assembly:

1. Slide slotted end of handle over center hole on aluminum head.
2. Align holes and insert middle size bolt.
3. Align holes of flat end of braces with holes on head, as shown, and insert the two shortest bolts and nuts (do not tighten nuts until step 5)
4. Align holes of wrap-around end of braces with the handle, as shown, and insert the longest bolt and nut.
5. Tighten all loc nuts on bolts. Use wrenches to tighten, being careful not to over tighten. Over tightening may result in crushing the handle, thereby compromising its strength.

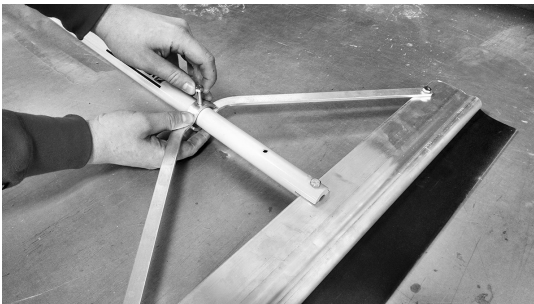

FULL WARRANTY

All Seymour Midwest products carry a full warranty against manufacturer defects in quality and workmanship. Products which have been abused or worn out from normal use are excluded from this warranty. We reserve the right to replace or issue credit on an individual basis.

REPLACEMENT PARTS LIST

See Reverse Side

PK30001
02/03/15

SEAL COAT SQUEEGEE II
REPLACEMENT PARTS LIST

SP10031	24" Seal Coat II head
SP10032	30" Seal Coat II head
SP10033	36" Seal Coat II head
SP10034	48" Seal Coat II head
SP10035	60" Seal Coat II head
SP10036	72" Seal Coat II head
SP50241	24" Seal Coat II rubber blade
SP50242	30" Seal Coat II rubber blade
SP50243	36" Seal Coat II rubber blade
SP50244	48" Seal Coat II rubber blade
SP50245	60" Seal Coat II rubber blade
SP50246	72" Seal Coat II rubber blade
RM60157	1 Phillips head screw for rubber blade
SA30001	Brace-wrap around (set of 2)
SA20172	Handle – 66" 1 1/8" yellow powder coated aluminum w/black grip
SA20171	Handle – 82" 1 1/8" yellow powder coated aluminum w/black grip
SA20170	Handle – 82" 1 3/8" oversized yellow powder coated aluminum w/black grip
SP50002	Grip – 6" black for 1 1/8"
SP50015	Grip – 4" black for 1 3/8"
SA60019	Bolt Bag: 4 bolts, 4 loc nuts (for 1 1/8" handle attachment)
SA60020	Bolt Bag: 4 bolts, 4 loc nuts (for 1 3/8" handle attachment)