




**SEYMOUR
MIDWEST**

Mailing Address:
PO Box 1674
Warsaw, IN 46581-1674

Phone: 844-SEYMOUR
FAX: 574-267-8508
www.seymourmidwest.com

Shipping Address:
2666 S Country Club Rd
Warsaw, IN 46580

"Sled" Style Gauge Rake Assembly Instructions

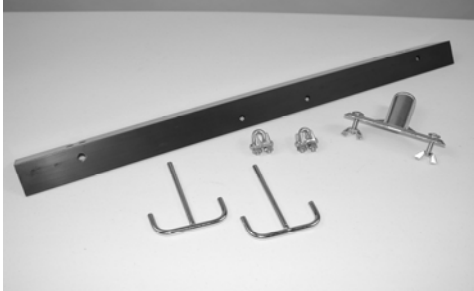

Tools Needed for Assembly:

- Adjustable wrench (or 10mm wrench)

Parts Shipped with Unit:

- Head
- Threaded Handle adapter w/hardware
- 2 sleds
- 2 U-clamps



Assembly Instructions:

1. Remove wing nuts from bolts on threaded handle adapter. Set threaded handle adapter on top of head and fasten wing nuts to the underside of the head and tighten.
2. Remove both nuts from one U-clamp and insert threaded ends of U-clamp through the head and loosely tighten nuts. Insert sled post through the U-clamp and then up through the hole in the head to the desired depth. Make sure sled runner is perpendicular to the head and tighten nuts with wrench.
3. Repeat step 2 for the 2nd sled and U-clamp.



Tips for using the "Sled" Style Gauge Rake

- Pull or push rake keeping the sleds flat to the surface.
- Do not drop rake on the surface. Sled depth setting may change with excessive force.
- Most standard threaded handles will fit this rake.



FULL WARRANTY

All Seymour Midwest products carry a full warranty against manufacturer defects in quality and workmanship. Products which have been abused or worn out from normal use are excluded from this warranty. We reserve the right to replace or issue credit on an individual basis.

PK90453
01/21/15